

How to Use the Roku

Roku Set-up

1. Connect the supplied HDMI cable from the Roku into an HDMI port on your TV.
2. Plug the Roku power adaptor into the round jack in the Roku, and then into a power source. It will turn on automatically.
3. Turn on your TV and select the appropriate HDMI input source. Once you do this, you should see the Roku screen.
4. Set up your network connection.
 - a. Press the Home button on the remote. Scroll down to Settings, and then scroll to the right to Network.
 - b. If you want to establish a wireless connection, select Wireless and enter your wireless network name and password, if necessary.
 - c. If you want to use a wired connection, connect an Ethernet cable (not supplied) between the Roku and your router, and select Wired Connection in Network Settings.

How to Watch Movies & TV Shows

The Vudu channel offers free movies and TV shows that the Library owns! Follow these instructions to begin:

1. Turn on the Roku, and select the Vudu channel.
2. On the top banner of Vudu, select "My Vudu."
3. Select "Movies" from the 2nd banner.
4. A list of covers will appear. The Library continually adds new titles year round.

Roku Channels

The Roku has more channels to explore besides Vudu. Here's a sampling:

- Vudu
- CNET
- NASA
- PBS Kids
- YouTube
- Pandora
- PBS
- TEDTalks
- The CW
- Crackle
- Vevo
- Twitch
- Allrecipes.com
- Arts & Crafts TV
- All Fitness TV
- Smithsonian Channel
- Popular Science
- iHeartRadio

Franklin Park Public Library District
10311 Grand Ave, Franklin Park, IL 60131
847-455-6016 • fppld.org



How to Use the Roku

Before You Return a Roku

1. Make sure all of the components are back in the kit bag.
 - ✓ The Roku box
 - ✓ The Roku remote with 2 AA batteries
 - ✓ A power cord
 - ✓ A HDMI cable
 - ✓ A “How to Use the Roku” guide
 - ✓ A Movie/TV Show list
2. Return the Roku kit to staff at the Circulation Desk.

Borrower Responsibility and Replacement Costs

The Franklin Park Public Library District offers Rokus for loan as an extension of the Library’s DVD collection. Patrons aged 18 or older with a Franklin Park library card in good standing can check out Rokus. Rokus are holdable for Franklin Park card holders only.

The loan period is 7 days with no renewals. Overdue fines will be \$1.00 a day. Failure to return the Roku and accessories within 6 weeks after the original due date will result in a charge to the cardholder’s account of \$95.00 with a \$5.00 processing fee.

Borrowers may not download or delete any titles, accounts, or content from the Rokus. Franklin Park Public Library District’s Rokus are pre-associated with select accounts and content, in accordance with the Library’s collection policies. The Library is not responsible for any costs incurred while borrowers use the equipment.

The Library is not responsible for clearing stored data from a Roku after it is returned, and is not responsible for personal information left on the device.

